

CMG SURVIVAL HEATER DEACTIVATION

1. OPEN Z1 RPCs FOR CMG SURVIVAL HEATERS DEACTIVATION

NOTE

Heater deactivation occurs in the following CMG pairs: 2 and 3, 1 and 4.

PCS Z1: EPS: RPCM Z14B B
 RPCM Z14B B

sel RPC 10

'Load: CMG2 Surv Htr'

√RPC Open Cmd - Ena
cmd RPC Position - Open
√RPC Position - Op

PCS Z1: EPS: RPCM Z14B B
 RPCM Z14B B

sel RPC 12

'Load: CMG3 Surv Htr'

√RPC Open Cmd - Ena
cmd RPC Position - Open
√RPC Position - Op

PCS Z1: EPS: RPCM Z13B B
 RPCM Z13B B

sel RPC 10

'Load: CMG1 Surv Htr'

√RPC Open Cmd - Ena
cmd RPC Position - Open
√RPC Position - Op

PCS Z1: EPS: RPCM Z13B B
 RPCM Z13B B

sel RPC 12

'Load: CMG4 Surv Htr'

√RPC Open Cmd - Ena
cmd RPC Position - Open
√RPC Position - Op